

When this type of vehicle enters the shop and is to be lifted, follow this setup without a scan tool:

Jack mode is as follows:

Press buttons 1 and 3 for at least 5 seconds with ignition ON.

Reverse to deactivate.

Button 1

Button 3



NOTE: Jack mode will deactivate automatically when the driver reaches over 5 K/hr.

For good measure, start your Allroad's engine and move up and down through the four levels of your car a few times before going for your first test drive. Once you've confirmed that all works well, carefully go for a test drive to check to see if it is to the customers liking.